



Periodic Maintenance Service Guide for XFORCE

The table below indicates the type of service classification that will be done on your vehicle at certain kilometer readings.

Legend: I = Inspect and check
 R = Replace
 L = Lubricate

|  PERIODIC MAINTENANCE SERVICE (PMS) CHECKSHEET Drive your Ambition | Maintenance Interval | | | | | | | |
|---|---|------------------------------------|--------------|--------|--------------|--------|--------------|--------|
| | Perform at kilometers (miles) intervals or months interval, whichever comes first | | | | | | | |
| | Kms. (x1000) | Months | Kms. (x1000) | Months | Kms. (x1000) | Months | Kms. (x1000) | Months |
| 1 | 1 mos. | 10 | 6 mos. | 20 | 12 mos. | 40 | 24 mos. | |
| | | 30 | 18 mos. | 60 | 36 mos. | 80 | 48 mos. | |
| | | 90 | 54 mos. | 100 | 60 mos. | 120 | 72 mos. | |
| | | | | 140 | 84 mos. | 160 | 96 mos. | |
| Operations inside the vehicle | | Maintenance Interval | | | | | | |
| Inspect all lights, switches & button operations | | All intervals or every 6 mos. | | | | | | |
| Inspect brake pedal and clutch pedal (if applicable) for freeplay | | All intervals or every 6 mos. | | | | | | |
| Inspect parking brake lever stroke and play (if applicable) | | Every 20,000 kms or every 12 mos. | | | | | | |
| Clean air purifier filter (A/C cabin filter) | | All intervals or every 6 mos. | | | | | | |
| Replace air purifier filter (A/C cabin filter) | | Every 20,000 kms or every 12 mos. | | | | | | |
| Reset PMS reminder indicator in instrument panel | | All intervals or every 6 mos. | | | | | | |
| Operations inside engine compartment | | Maintenance Interval | | | | | | |
| Inspect drive belt for cracks, fraying, wear, and adjust tension if necessary | | Every 40,000 kms or every 24 mos. | | | | | | |
| Inspect intake air hose, radiator hose and turbocharger oil hose (Diesel) for damage | | Every 20,000 kms or every 12 mos. | | | | | | |
| Replace Spark Plugs (if applicable) | | Every 100,000 kms | | | | | | |
| Check Valve clearance except vehicles w/ auto lash | | Every 100,000 kms | | | | | | |
| Inspect air cleaner element (engine air filter) for clogging and damage *Replace air cleaner element every 40,000km or every 24 mos. | | All intervals | | | | | | |
| Inspect all fluid levels (Brake/clutch, Steering, Engine oil & Coolant) *Change brake & clutch fluid (if applicable) every 40,000km or every 24 mos. *Change engine coolant on the first 160,000 kms or 96 mos., there after every 100,000 kms or every 60 mos. | | All intervals | | | | | | |
| Check battery status using Midtronics | | All intervals | | | | | | |
| Replace Fuel filter (Diesel) | | Every 20,000 kms or every 12 mos. | | | | | | |
| Replace Fuel filter (Gasoline) | | Every 40,000 kms or every 24 mos. | | | | | | |
| Check & replace Radiator cap sticker | | All intervals | | | | | | |
| Operations under the vehicle | | Maintenance Interval | | | | | | |
| Inspect suspension for damage and looseness (arm ball joints for play, dust cover for damage, steering linkage looseness) | | Every 20,000 kms or every 12 mos. | | | | | | |
| Lubricate propeller shaft with grease fitting (if applicable) | | Every 20,000 kms or every 12 mos. | | | | | | |
| Inspect brake line, transmission, transfer key, front and rear differential for oil leakage (if applicable) | | All intervals | | | | | | |
| Change Manual Transmission fluid (if applicable); Include transfer key if 4x4 | | Every 100,000 kms or every 60 mos. | | | | | | |
| Change gear oil in Front & Rear Differential | | Every 80,000 kms | | | | | | |
| Operations outside the vehicle | | Maintenance Interval | | | | | | |
| Check Wheel alignment | | Every 40,000 kms or every 24 mos. | | | | | | |
| Check tire condition for pressure, presence of foreign objects, tread wear and depth | | All intervals | | | | | | |
| Inspect front and rear wheel bearings for play | | Every 60,000 kms or every 36 mos. | | | | | | |
| For front & rear, check Brake Pads & Shoe lining (if applicable) then conduct Tire Rotation | | Every 10,000 kms or every 6 mos. | | | | | | |
| Change power steering fluid (if applicable) | | Every 40,000 kms or every 24 mos. | | | | | | |
| Operations after engine is warmed up | | Maintenance Interval | | | | | | |
| Change Automatic Transmission fluid (if applicable); Include transfer key if 4x4 | | Every 100,000 kms | | | | | | |
| Change CVT fluid (if applicable) | | Every 40,000 kms | | | | | | |
| Change Engine oil | | All intervals | | | | | | |
| Change Engine oil filter | | All intervals | | | | | | |
| Check Exhaust Gas Recirculation (EGR) system | | Every 20,000 kms or every 12 mos. | | | | | | |
| Others | | Maintenance Interval | | | | | | |
| Perform SIQL or Small Injection Quantity Learning (if applicable) | | Every 20,000 kms or every 12 mos. | | | | | | |
| Perform MPI or Multi Point Injection Learning (if applicable) | | Every 40,000 kms or every 24 mos. | | | | | | |
| Check body condition for damage | | Every 20,000 kms or every 12 mos. | | | | | | |
| Road Test (upon request of customer only) | | Every 20,000 kms or every 12 mos. | | | | | | |

*Subject to change without prior notice